

# SUJATA®

**ESPIRA**

## OPERATING MANUAL

WITH WARRANTY CARD



GERMAN NON-STICK  
TWO-COAT ON SOLE PLATE



OVERHEAT PROTECTION  
THERMAL FUSE



DESIGNED FOR  
TRICKY AREAS



BEFORE OPERATING THIS DRY IRON, READ THE INSTRUCTIONS CAREFULLY.

## IDENTIFICATION OF PARTS



**Note:** When the iron is switched on for the first time, it may emit some fumes. Please note this is not a malfunction.

## HOW TO USE

- Remove any sticker or protective foil from the sole plate before using for the first time. Clean the sole plate with a soft cloth.
- Place the iron on its backrest and connect to an electric outlet.
- The Heat On-Off Indicator light switches 'ON' when connected to electricity. It will auto-shut 'OFF' after heating of the sole plate reaches a pre-set temperature set on the Fabric Selector Dial. As the temperature of the sole plate decreases, the light gets switched 'ON' again until the sole plate attains the pre-set temperature.



## Setting the Temperature:

Turn the Fabric Selector Dial to the setting that is most appropriate for the fabric. In case the fabric is a blend of two or more fibres (like nylon/ silk/ wool/ cotton), select the minimum temperature suitable for the fibre. For instance, in a blend of polyester and cotton, the 'Polyester' temperature can be selected.

**Note:** For fibre content and ironing instructions, refer to the garment label.

## TROUBLESHOOTING

Problem	Cause(s)	Solution
The iron is connected to the electric socket but the sole plate remains unheated.	Electric Connection Fault.	Check all electrical connections like mains cord, the plug, and the electric socket.
	The Fabric Selector Dial is set to the minimum level.	Set the Fabric Selector Dial to the level suitable for the fabric.

**Note:** If the above measures fail, contact the **SUJATA** authorised service centre or call the customer care number.

## TIPS FOR BETTER IRONING

- Keep the iron moving over the fabric to prevent scorching.
- For better ironing, fabric/garment should be slightly damp or use water spray.
- Silk/woolen/synthetic fabrics should be ironed on the reverse side (inside out) and only in one direction to avoid shiny spots.

## CLEANING & MAINTENANCE

- Switch OFF the iron after use and disconnect the power cord by pulling it while gripping the plug. Do not try to disconnect by pulling the cord itself.
- Let the iron cool down, simply wipe with a damp cloth and let it dry. Never immerse in water.
- When not in use, always keep the iron placed on its backrest.
- Never use a scouring pad, vinegar or other chemicals to clean the sole plate.

## WARNING & PRECAUTIONS

- Always connect the dry iron to the wall socket with proper earthing, using a 3-pin plug to connect to electric supply.
- Do not place the sole plate on a rough or abrasive surface.
- Do not use the iron on metallic fittings to avoid scratches.
- Do not use the iron if the plug or the mains cord appears damaged.
- Never leave the iron unattended whenever it is connected to an electric outlet.
- This product is not made to be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not let the mains cord come into contact with the hot sole plate of the iron.
- The sole plate of the iron can become extremely hot and may cause burns if touched.
- Check the electric supply cord regularly for possible damage before usage.
- Always place and use the iron on a stable, level and horizontal surface.
- Before storing let the Iron cool down sufficiently (standing on the backrest).



This product is classified as Electrical and Electronic Equipment. Should the time come for you to dispose of this product, please ensure that you do so in accordance and compliance with local laws.

## SPECIFICATIONS

<b>Model Type &amp; No.</b>	ESPIRA / ORANGE-WHITE
<b>Power Supply</b>	230V, 50-60 Hz
<b>Power Consumption</b>	1000 W
<b>Cord</b>	Approx. 1.6 metres usable with 6 Amp. 3 pin plug.
<b>Sole Plate</b>	Weilburger Greblon Double Coat Non-stick



**WARRANTY IS NOT VALID IF THIS PRODUCT IS USED FOR COMMERCIAL PURPOSE**

**SUJATA ESPIRA Dry Iron** is warranted against manufacturing defects for a period of **TWO YEARS** from the date of purchase. Within this period any defective unit will be repaired or replaced at manufacturer's option, free of cost, subject to the unit being delivered to our authorised service centre at customer's cost. The warranty does not cover damages resulting from commercial use, accident, mishandling or negligence on the part of customer or non compliance of instructions in the operating manual or if the mechanism is tampered with by the customer or any unauthorised person other than our service personnel. The warranty card duly stamped and signed by the dealer alongwith the cash memo should be produced at the authorised service centre, otherwise the warranty will be treated as invalid. Liability for consequential damages or loss is neither accepted nor implied under the warranty.

All the images on the box and manual are for illustration purposes only, specifications are subject to change without notice.



**SUJATA** 

Sr. No.

Checked by

**ESPIRA**

**DRY IRON**

Cash Memo No.

Date

Customer's Name & Address

Customer's Telephone

Signature of the Dealer

RUBBER STAMP  
OF THE DEALER



Scan to visit  
[www.sujataappliances.com](http://www.sujataappliances.com)

# SUJATA®

**ESPIRA**

## OPERATING MANUAL

WITH WARRANTY CARD



GERMAN NON-STICK  
TWO-COAT ON SOLE PLATE



OVERHEAT PROTECTION  
THERMAL FUSE




DESIGNED FOR  
TRICKY AREAS



BEFORE OPERATING THIS DRY IRON, READ THE INSTRUCTIONS CAREFULLY.

## IDENTIFICATION OF PARTS

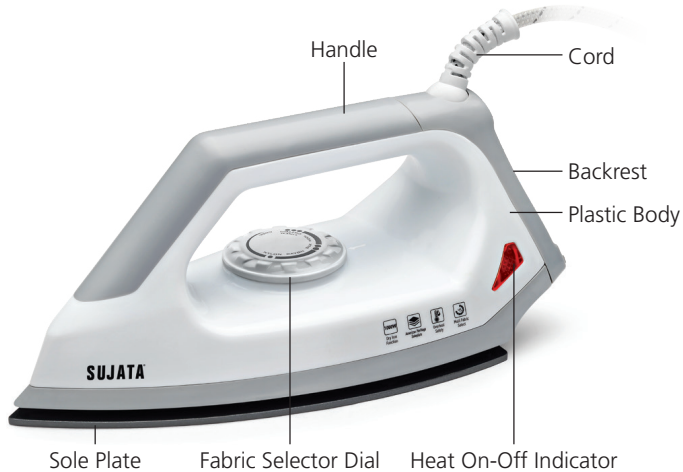

**Note:** When the iron is switched on for the first time, it may emit some fumes. Please note this is not a malfunction.

## HOW TO USE

- Remove any sticker or protective foil from the sole plate before using for the first time. Clean the sole plate with a soft cloth.
- Place the iron on its backrest and connect to an electric outlet.
- The Heat On-Off Indicator light switches 'ON' when connected to electricity. It will auto-shut 'OFF' after heating of the sole plate reaches a pre-set temperature set on the Fabric Selector Dial. As the temperature of the sole plate decreases, the light gets switched 'ON' again until the sole plate attains the pre-set temperature.



## Setting the Temperature:

Turn the Fabric Selector Dial to the setting that is most appropriate for the fabric. In case the fabric is a blend of two or more fibres (like nylon/ silk/ wool/ cotton), select the minimum temperature suitable for the fibre. For instance, in a blend of polyester and cotton, the 'Polyester' temperature can be selected.

**Note:** For fibre content and ironing instructions, refer to the garment label.

## TROUBLESHOOTING

Problem	Cause(s)	Solution
The iron is connected to the electric socket but the sole plate remains unheated.	Electric Connection Fault.	Check all electrical connections like mains cord, the plug, and the electric socket.
	The Fabric Selector Dial is set to the minimum level.	Set the Fabric Selector Dial to the level suitable for the fabric.

**Note:** If the above measures fail, contact the **SUJATA** authorised service centre or call the customer care number.

## TIPS FOR BETTER IRONING

- Keep the iron moving over the fabric to prevent scorching.
- For better ironing, fabric/garment should be slightly damp or use water spray.
- Silk/woolen/synthetic fabrics should be ironed on the reverse side (inside out) and only in one direction to avoid shiny spots.

## CLEANING & MAINTENANCE

- Switch OFF the iron after use and disconnect the power cord by pulling it while gripping the plug. Do not try to disconnect by pulling the cord itself.
- Let the iron cool down, simply wipe with a damp cloth and let it dry. Never immerse in water.
- When not in use, always keep the iron placed on its backrest.
- Never use a scouring pad, vinegar or other chemicals to clean the sole plate.

## WARNING & PRECAUTIONS

- Always connect the dry iron to the wall socket with proper earthing, using a 3-pin plug to connect to electric supply.
- Do not place the sole plate on a rough or abrasive surface.
- Do not use the iron on metallic fittings to avoid scratches.
- Do not use the iron if the plug or the mains cord appears damaged.
- Never leave the iron unattended whenever it is connected to an electric outlet.
- This product is not made to be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not let the mains cord come into contact with the hot sole plate of the iron.
- The sole plate of the iron can become extremely hot and may cause burns if touched.
- Check the electric supply cord regularly for possible damage before usage.
- Always place and use the iron on a stable, level and horizontal surface.
- Before storing let the Iron cool down sufficiently (standing on the backrest).



This product is classified as Electrical and Electronic Equipment. Should the time come for you to dispose of this product, please ensure that you do so in accordance and compliance with local laws.



## SPECIFICATIONS

<b>Model Type &amp; No.</b>	ESPIRA / GREY-WHITE
<b>Power Supply</b>	230V, 50-60 Hz
<b>Power Consumption</b>	1000 W
<b>Cord</b>	Approx. 1.6 metres usable with 6 Amp. 3 pin plug.
<b>Sole Plate</b>	Weilburger Greblon Double Coat Non-stick



**WARRANTY IS NOT VALID IF THIS PRODUCT  
IS USED FOR COMMERCIAL PURPOSE**

**SUJATA ESPIRA Dry Iron** is warranted against manufacturing defects for a period of **TWO YEARS** from the date of purchase. Within this period any defective unit will be repaired or replaced at manufacturer's option, free of cost, subject to the unit being delivered to our authorised service centre at customer's cost. The warranty does not cover damages resulting from commercial use, accident, mishandling or negligence on the part of customer or non compliance of instructions in the operating manual or if the mechanism is tampered with by the customer or any unauthorised person other than our service personnel. The warranty card duly stamped and signed by the dealer alongwith the cash memo should be produced at the authorised service centre, otherwise the warranty will be treated as invalid. Liability for consequential damages or loss is neither accepted nor implied under the warranty.

All the images on the box and manual are for illustration purposes only, specifications are subject to change without notice.



**SUJATA** 

Sr. No.

Checked by

**ESPIRA**

**DRY IRON**

Cash Memo No.

Date

Customer's Name & Address

Customer's Telephone

Signature of the Dealer

**RUBBER STAMP  
OF THE DEALER**

**SUJATA<sup>®</sup>**



**CARE**

**1800-1022-758**



Scan to visit

[www.sujataappliances.com](http://www.sujataappliances.com)