

SUJATA®



Blendmatic®


OPERATING MANUAL

WITH WARRANTY CARD




BEFORE OPERATING THIS SET, READ THE INSTRUCTIONS CAREFULLY.

IDENTIFICATION OF PARTS

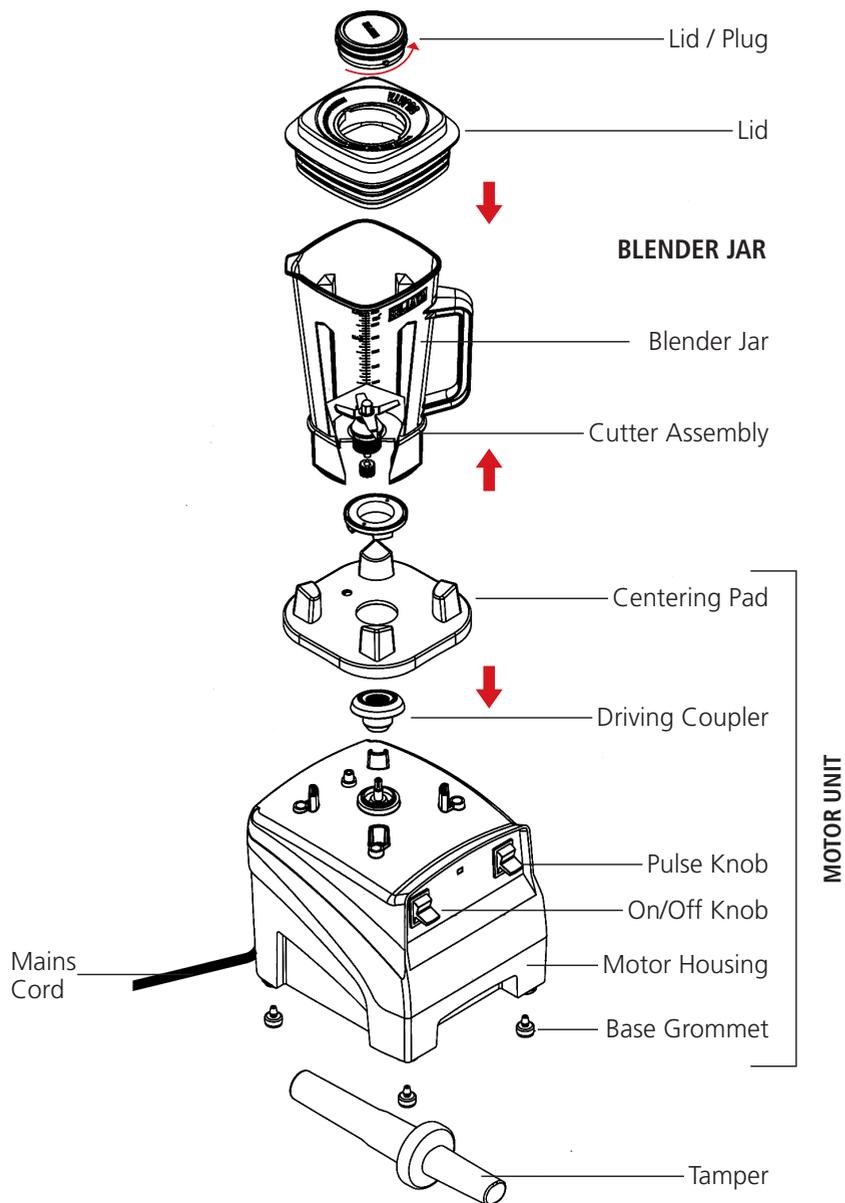

MICRO SWITCH FOR JAR POSITIONING

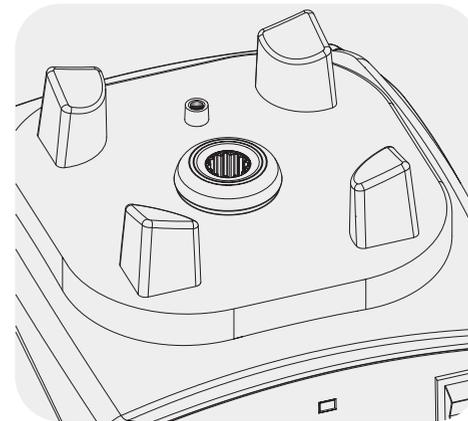

A Micro Switch has been provided on the top of the Motor Unit. It does not let the Motor start unless the Jar has been placed properly at the position provided on the Motor Unit and therefore providing safety against unwanted incidence.

OVERLOAD PROTECTOR

An Overload Protector has been fit onto the motor unit at the bottom as shown in the picture. It protects motor from overheating incase of overload.


If the motor shuts off, wait for 2 minutes and press the button to restart the motor.

Important Tip : Incase the motor trips constantly, reduce the quantity of the material in the Jar.





USING THE JAR

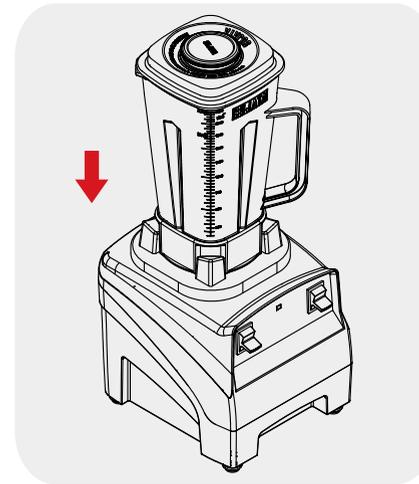


Place the Jar onto the Motor Unit firmly with Jar Handle being forward (left/right).

If the position is not proper, the Micro switch will not let the Motor start.

Now the food material can be put into the Jar and Lid with Cap should be fixed onto the Jar.

The appliance should not be connected to electric supply until the Jar has been locked properly and lid put in place.

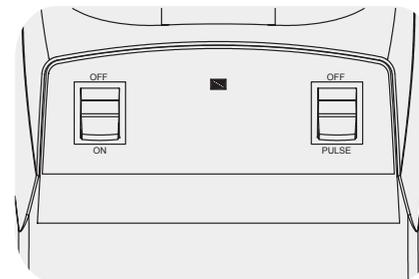


Once the Jar has been positioned properly onto the Motor Unit and lid put in place, connect the appliance to an electric supply.

Pulse switch will keep the Motor ON as long as it is kept pressed down. It is used for momentary action to rotate the material inside the jar evenly so that it can be processed properly.

The other switch will keep the Motor running as long as the switch is kept in ON position.


CLEANING THE JAR

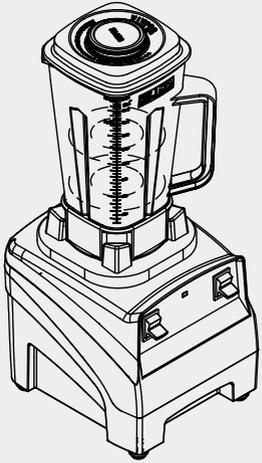


To clean the blender jar quickly and thoroughly, fill the jar one third full of luke warm water, and add a few drops of detergent or soap flakes. Switch the motor ON and run for some time. The soapy water will clean the jar. Switch off the motor and empty the blender jar.

Refill the jar with fresh water without any detergent. Restart the motor and empty the jar again after switching off. The process could be done 2-3 times to get rid of soap.

Place the jar upside - down to drain out the water and wipe with a dry cloth.

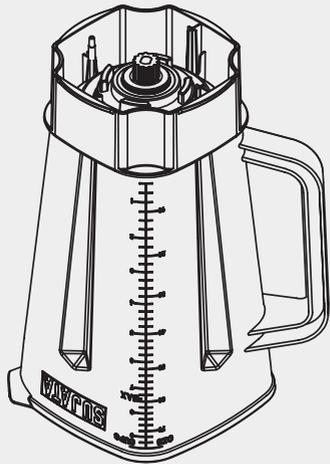

CLEANING THE MOTOR UNIT

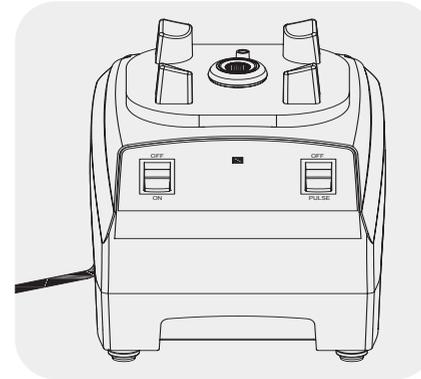

To clean the motor housing, simply wipe with a damp cloth and dry. **Never immerse or pour water on the motor housing.**





PRECAUTIONS, CARE AND MAINTENANCE

- Before first use or after long unuse, check to see if shaft of the jar rotates smoothly.
- Always place the jar onto the motor unit properly in order to avoid vibration and mismatching of the jar's gear with the driving gear of the motor unit.
- The air ventilation holes at the bottom of the motor unit may get blocked if the machine is used on any thin plastic sheet, cloth or paper etc., as they get sucked up, blocking the ventilation holes and causing excessive heating up of the motor.
- Insert Tamper (**only when the motor is switched off**) only through the Jar lid to stir the ingredients between operations instead of opening the entire lid. Using Tamper with complete lid open may damage the Tamper.
- The motor operates at optimum efficiency at the specified voltage only. Wide voltage fluctuations during operation might affect quality of blending. If your area faces such periodic fluctuations use a voltage stabilizer.
- After using the machine, the switch must be turned off and electric supply disconnected by pulling the plug (not the cord).
- Do not let cord hang over the edges of tables or counter or touch hot surfaces.
- To protect against electrical hazards, do not immerse motor unit or cord plug in water or other liquids. Never use on wet surfaces.
- **Keep away from the moving parts and cutters. Do not insert finger, knife etc. in jar while in operation.**
- **Do not remove or replace any attachment or attachment cover when the motor is ON.**
- Switch off the motor, if it stalls or smoke emanates from the motor.
- Keep Machine away from direct heat or sun. Never wash the parts in hot water.
- Always cool the very hot ingredients before pouring into the jar.

SPECIFICATIONS*

Model Type & No.	BLENDMATIC PROFESSIONAL BLENDER
Motor	Heavy duty, universal type 1000 Watts with double ball bearing
Power Supply	230 Volts, AC 50 Hz
Power Consumption	1000 Watts on maximum load
Rating	90 minutes
Speed Control	Single Speed with on/off Switch Pulse switch for momentary motion
Motor Speed	No load speed maximum approx. 22,000 R.P.M.
Protection	Class I double insulated
Flex Cord	P.V.C. approx. 2.25 meters with 6 Amp. 3 pin plug
Net Weight with Carton	5.660 Kgs. approx.
Product Dimensions (in Cms.)	20 x 23 x 60
Capacity of Jar	2250 ml

* Due to continuous upgradation in quality, design and specifications can be changed at any time without notice.

All the images on the box and manual are for illustration purposes only, specifications are subject to change without notice.

SUJATA®



Blendmatic

ONE YEAR WARRANTY

SUJATA BLENDMATIC is warranted against manufacturing defects for a period of **ONE YEAR** from the date of purchase. Within this period any defective unit will be repaired or replaced at manufacturer's option free of cost subject to the unit being **delivered to our authorized service centre at customer's cost.**

The warranty does not cover damages resulting from normal wear and tear or from accident, mishandling or negligence on the part of customer or because of non compliance of instructions in the operating manual or if the mechanism is tampered with by the customer or any unauthorized person other than our service personnel.

The warranty card duly stamped and signed by the dealer alongwith the cash memo should be produced to the authorised service centre, otherwise the warranty will be treated as invalid. Liability for consequential damages or loss is neither accepted nor implied under the warranty.

SUJATA® Blendmatic	Sr. No. <input type="text"/>	Checked by <input type="text"/>
Cash Memo No. <input type="text"/>	Date <input type="text"/>	
Customer's Name & Address <input type="text"/>		
<input type="text"/>		
Customer's Telephone <input type="text"/>		
<input type="text"/>		
Signature of the Dealer <input type="text"/>	RUBBER STAMP OF THE DEALER	

SUJATA[®]

CARE
1800-1022-758



Scan for
WhatsApp Care



Scan to visit
www.sujataappliances.com