

SUJATA®

MULTI PURPOSE GRILL | SG01

OPERATING MANUAL



READ THE INSTRUCTIONS CAREFULLY
BEFORE OPERATING THIS MULTI PURPOSE GRILL

IMPORTANT SAFEGARDS

 
- READ ALL INSTRUCTIONS
- Use only on AC 220-240 Volt, 50-60 Hz. Use only for household.
- Do not touch hot surfaces. Use handle or knobs.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
- Do not operate the appliance if it has malfunctioned or has been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the Appliance yourself. Take it to an authorized service center for examination and repair. An incorrect reassembly could present a risk of electric shock when the Appliance is used.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
- Do not use outdoors or for commercial purposes.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or heated oven.
- Unplug the unit when finished using.
- Do not use appliance for other than intended use.
- Not intended to be operated by means of an external timer or separate remote-control system.
- Extreme caution must be exercised when moving an appliance containing hot oil or other hot liquids.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- The temperature of accessible surfaces may be high when the appliance is operating.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug. If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

IDENTIFICATION OF PARTS

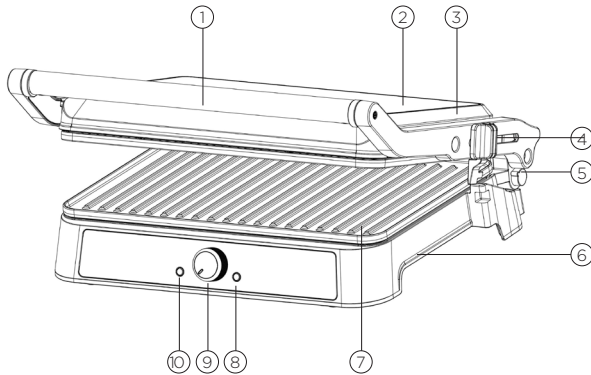

1. Handle
2. Decorative Plates
3. Upper Housing
4. Lift Lever Button with Lock
5. 180°Angle button
6. Bottom Housing
7. Grill Non-stick Plate
8. Ready Light
9. Thermostat Knob
10. Power Light

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging including promotional materials.
- Clean the Cooking Plates by wiping a sponge or cloth dampened in warm water.

DO NOT IMMERSE THE UNIT IN WATER AND DO NOT RUN WATER DIRECTLY ONTO THE COOKING SURFACES.

- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

Notice: When your Appliance is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

HOW TO USE

Check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth. For best results, pour a teaspoon of vegetable oil on to the non-stick plates. Spread over with an absorbent kitchen towel and wipe off any excess oil.

 
PREPARING YOUR GRILLER

- Close the Appliance and plug it into the wall outlet, Open the Timer, You will find the red power light comes on, indicating that the Appliance has begun Power. At this time, you can use the right Thermostat Knob to set the temperature control to your desired setting: "MIN" for light colored food and "MAX" for darker food. At first, try a setting in the middle, You will find the green ready light comes on, indicating that the Appliance has begun preheating. You may later adjust it lower or higher according to your preference. Different foods will also cook up differently.
- It will preheat approximately 3-5 minutes to reach cooking temperature, Green ready light goes out, the Appliance is ready for use.

COOKING

To Use as a Contact Grill

- Set the Appliance Temperature Control to your desired setting. At first, try the "MAX" setting.
- You may later adjust it lower or higher according to your preference.
- Prepare the burgers, boneless pieces of meat and thin cuts of meat or other food as directed and place it onto the bottom cooking plate.
- Close the top cooking plate which has a floating hinge that is designed to evenly press down on the sandwich. The top plate must be fully lowered to achieve Grill marks on the selected foods.
- When the food is cooked use the handle to open the lid. Remove the food with the help of a spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cooking plates.
- Use the appliance as a contact grill, when you want to cook something in a short amount of time or when you are looking for a healthy method of grilling. When cooked on the contact grill, food will cook quickly because you are grilling both sides of the food at the same time. The ribs on the grill plates combined with the grease spout at the corner of the plate allow the grease to drip from the meat and drain off the plates.

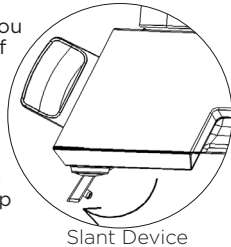

Using the Extendable Feet

- In cooking, if you want the extra fat out, you can open the extendable feet at the bottom.

To Use as Press grill

- Set the Appliance Temperature Control to your desired setting. At first, try the "MAX" setting.
- You may later adjust it lower or higher according to your preference.
- Prepare the sandwiches as directed and place it onto the bottom cooking plate. Always place sandwiches towards the rear of the bottom cooking plate.

 
- Close the top cooking plate which has a floating hinge that is designed to evenly press down on the sandwich. The top plate must be fully lowered to cook sandwiches.
- Cook for about 3 to 6 minutes or until golden brown, adjusting the time to suit your own individual taste.
- When the sandwich is cooked use the handle to open the lid. Remove the sandwich with the help of a spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cooking plates.
- Use the Appliance as a Press grill to grill sandwiches, breads and quesadillas.
- The Appliance was designed with a unique handle and hinge that allows the cover to adjust to the thickness of the food. You can easily grill anything from a thinly-sliced potato to thick meat with even results.
- When cooking more than one food item in the contact grill, it is important that the thickness of food items is consistent so the cover will close evenly on the food.

To Use as Open grill

- Place Appliance on a clean flat surface where you intend to cook. The Appliance can be positioned in flat position.
- Upper plate/cover is in level with lower plate/base. The upper and lower plates line up to create one large cooking surface. To get the Appliance to this position, locate the hinge release button on the right arm.

Angle Button

- With your left hand on the handle, use your right hand to press the button. Push the handle back until the cover rests flat on the counter. The unit will stay in this position until you lift the handle and cover to return it to the closed position.

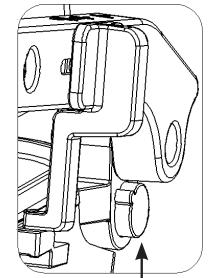

Press the button to open 180 degrees Griddle

- Use the Appliance as an open grill to cook burgers, steak, poultry (we do not recommend cooking bone-in chicken, since



it does not cook evenly on an open grill), fish and vegetables.

- Cooking on the open grill is the most versatile method of using the Appliance. In the open position, you have double the surface area for grill.
- You have the option of cooking different types of foods on separate plates without combining their flavors, or cooking large amounts of the same type of food. The open position also accommodates different cuts of meat with varying thicknesses, allowing you to cook each piece to your liking.

CLEANING AND CARE

- Always unplug the Appliance and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble Appliance for cleaning. Never immerse the Appliance in water or place in dishwasher.
- The cooking plates can be cleaned in water or dishwasher.
- Wipe cooking plates with a soft cloth to remove food residue. For baked on food residue squeeze some warm water mixed with detergent over the food residue then clean with a non-abrasive plastic scouring pad or place wet kitchen paper over the grill to moisten the food residue.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods, they can damage the non-stick surface.
- Wipe the outside of the Appliance with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.
- Do not place in the dishwasher.
- Remove and empty the drip tray after each use and wash the tray in warm, soapy water. Avoid the use of scouring pads or harsh detergents as they may damage the surface.
- Rinse and dry thoroughly with a clean, soft cloth and replace.

STORAGE

- Always unplug the Appliance before storage.
- Always make sure the Appliance is cool and dry before storing.
- The power cord can be wrapped around the bottom of base for storing.

SPECIFICATIONS

Model Type & No.	MULTI PURPOSE GRILL (SG 01)
Power Supply	220-240V - 50-60Hz
Power Consumption	2000 w



WARRANTY IS NOT VALID IF THIS PRODUCT IS USED FOR COMMERCIAL PURPOSE

SUJATA MULTI PURPOSE GRILL is warranted against manufacturing defects for a period of **TWO YEARS** from the date of purchase. Within this period any defective unit will be repaired or replaced at manufacturer's option, free of cost, subject to the unit being delivered to our authorised service centre at customer's cost. The warranty does not cover damages resulting from commercial use, accident, mishandling or negligence on the part of customer or non compliance of instructions in the operating manual or if the mechanism is tampered with by the customer or any unauthorised person other than our service personnel. The warranty card duly stamped and signed by the dealer alongwith the cash memo should be produced at the authorised service centre, otherwise the warranty will be treated as invalid. Liability for consequential damages or loss is neither accepted nor implied under the warranty.

All the images on the box and manual are for illustration purposes only, specifications are subject to change without notice.



Scan to visit
www.sujataappliances.com